

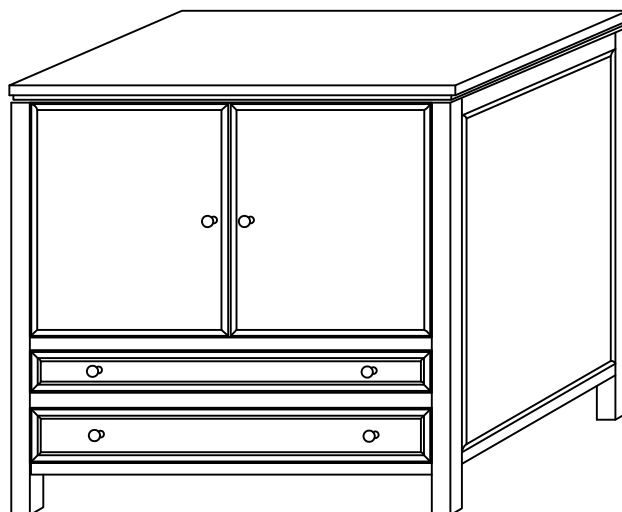
HOME DECORATORS C O L L E C T I O N

BF-24670 MSL STORAGE CABINET 36"H×42"W

INV#04638





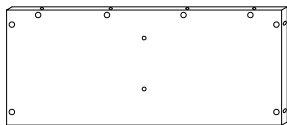
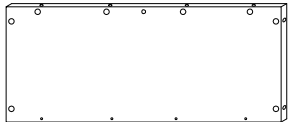


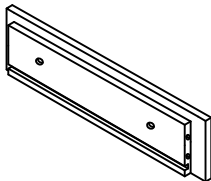
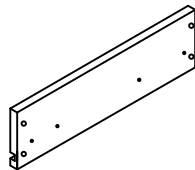
ASSEMBLY INSTRUCTIONS

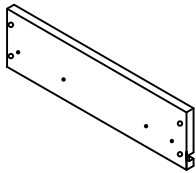
Made In China



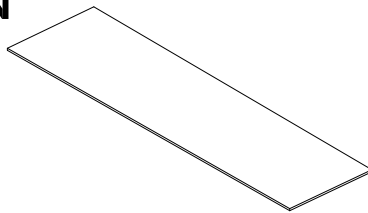
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

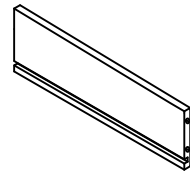
PARTS LIST		
A  TOP PANEL-1PC	B  RIGHT SIDE PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  LARGE ACROSS PANEL-1PC	E  BOTTOM PANEL-1PC	F  UP BACK PANEL-1PC
G  DOWN BACK PANEL-1PC	H  ADORNING PANEL-1PC	I  SMALL ACROSS PANEL-1PC
J  SHELF PANEL-1PC	K  SMALL DRAWER PANEL FRONT-1PC	L  SMALL LEFT DRAWER PANEL SIDE-1PC

M

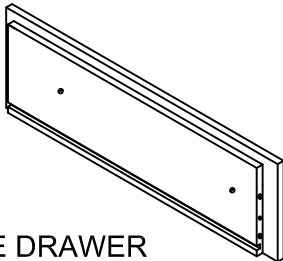
SMALL RIGHT
DRAWER PANEL SIDE-1PC

N

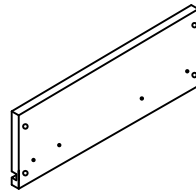
SMALL
DRAWER PANEL BOTTOM-1PC

O

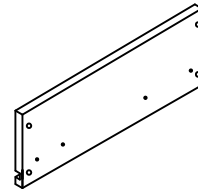
SMALL
DRAWER PANEL BACK-1PC

P

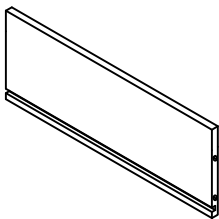
LARGE DRAWER
PANEL FRONT-1PC

Q

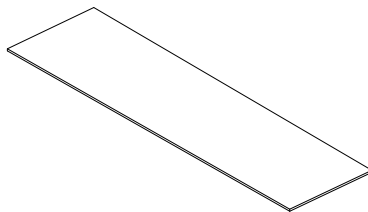
LARGE LEFT
DRAWER PANEL SIDE-1PC

R


LARGE RIGHT
DRAWER PANEL SIDE-1PC

S


LARGE
DRAWER PANEL BACK-1PC

T

LARGE
DRAWER PANEL BOTTOM-1PC

U

DRAWER
SUPPORT PANELS-4PCS

V

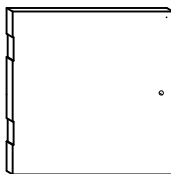
DRAWER
STAND PANELS-2PCS

W

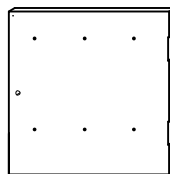
DRAWER SMALL
ACROSS PANELS-4PCS

X

DRAWER LARGE
ACROSS PANELS-2PCS

Y


RIGHT DOOR-1PC

Z


LEFT DOOR-1PC

A1


LEFT
DRAWER PANEL SIDES-2PCS

B1


RIGHT
DRAWER PANEL SIDES-2PCS

C1


DRAWER PANEL BACK-2PCS

D1


DRAWER
PANEL BOTTOMS-2PCS

E1


DRAWER
PANEL FRONTS-2PCS

F1


STAND PANEL-1PC

G1

SALVER PANELS-3PCS

H1


LEFT STAND PANEL-1PC

I1

FEMALE MAGNETS-2PCS

J1


11mm× 1"



SCREWS-10PCS

K1

6mm× 1"



SCREWS-38PCS

L1

6mm× 3/4"



SCREWS-22PCS

M1

6mm× 1/2"



SCREWS-48PCS

N1


5mm× 1/2"




SCREWS-2PCS

O1

8mm× 1"




SCREWS-5PCS

P1


ALLEN WRENCH-1PC

Q1

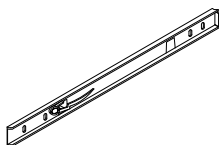
KNOBS-6PCS

R1

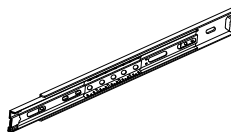
SHELF SUPPORT-4PCS

S1

DOWELS-2PCS

T1

INNER SLIDES-4PCS

U1

OUTER SLIDES-4PCS

V1


CAM-TOOL-1PC

W1

8mm× 5/8"




SCREWS-6PCS

X1


CAM-BOLTS-33PCS

Y1


CAM-LOCKS-33PCS

Z1


HINGES-4PCS

A2


LARGE MAGNET-1PC

B2

FEET-4PCS

C2

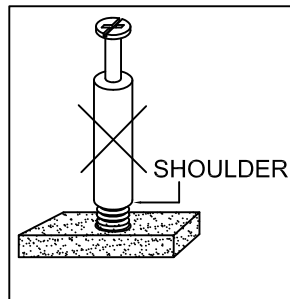
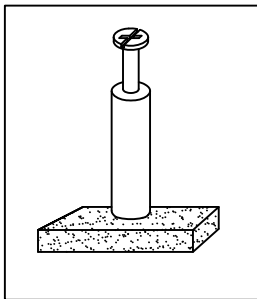
CAM-LOCK CAPS-17PCS

D2

NUTS-2PCS

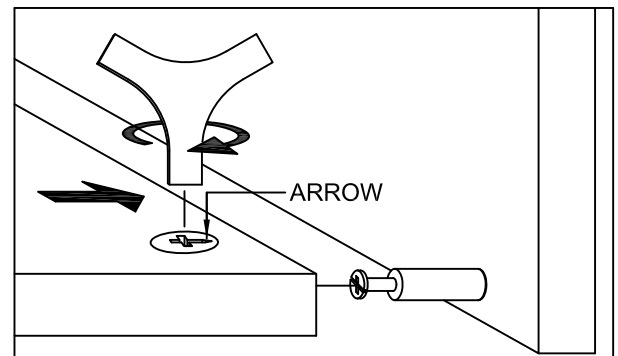

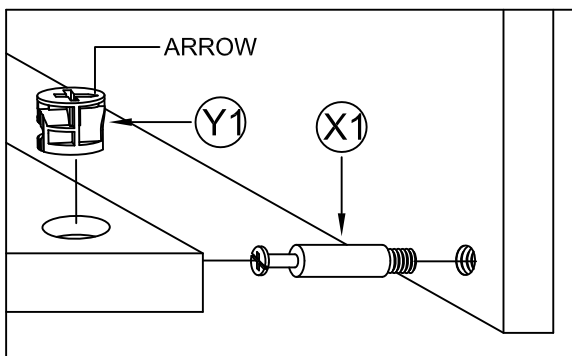
NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.



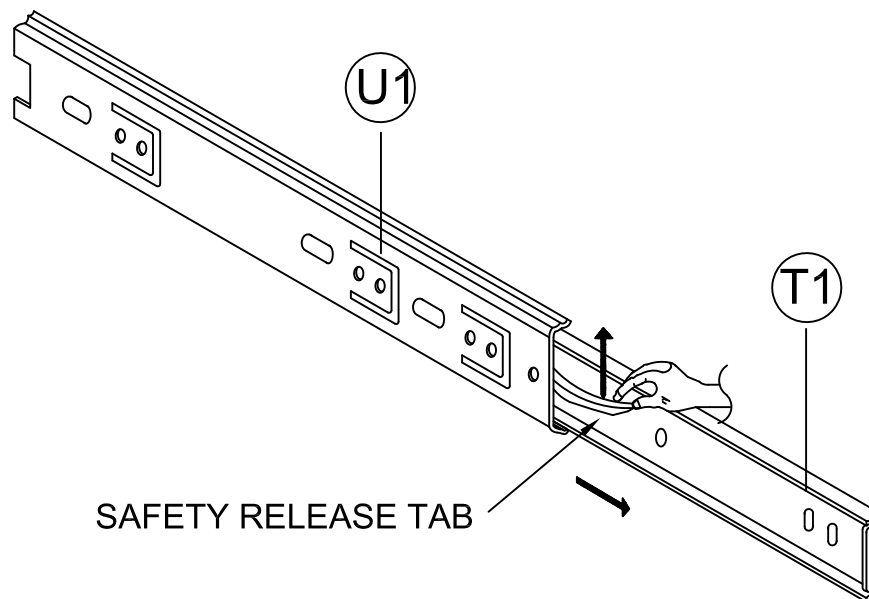
NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

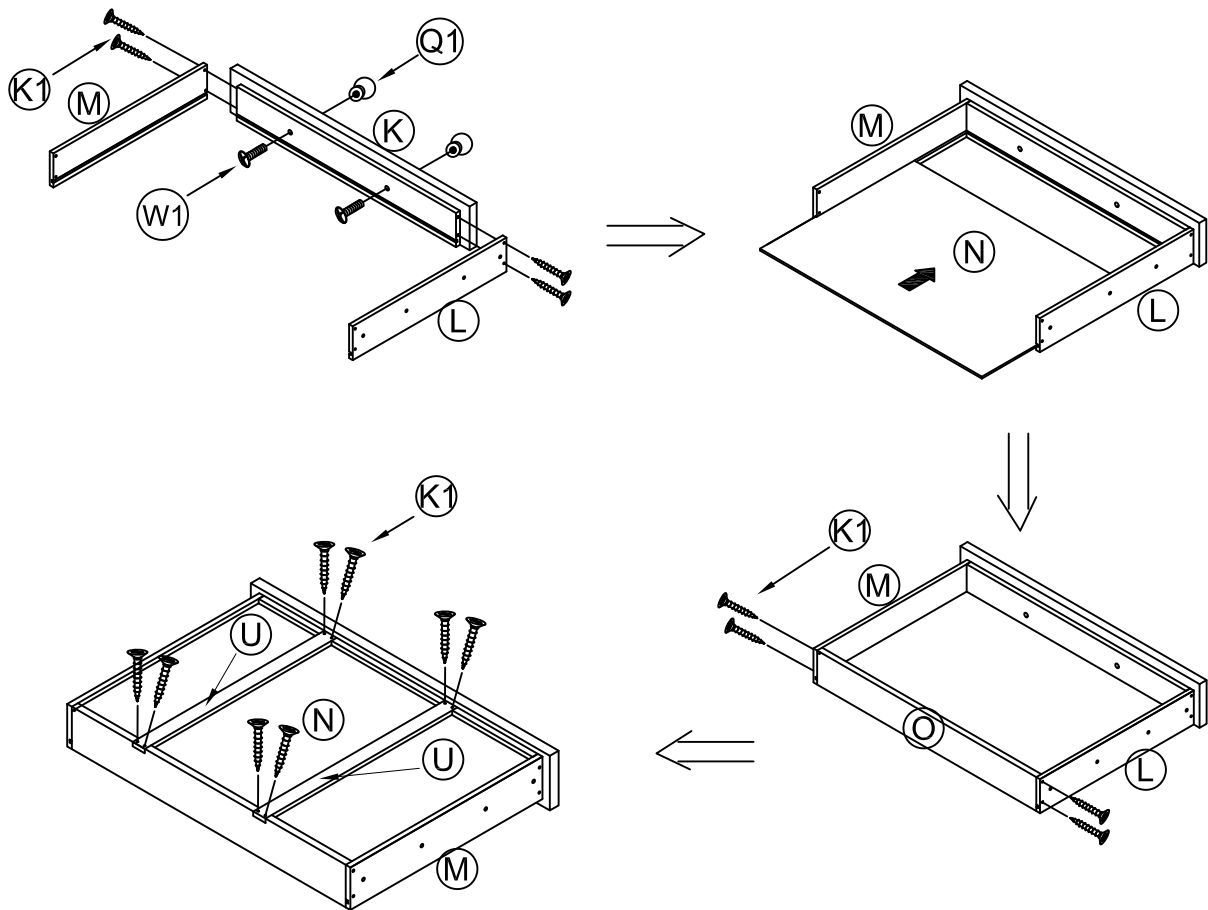


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

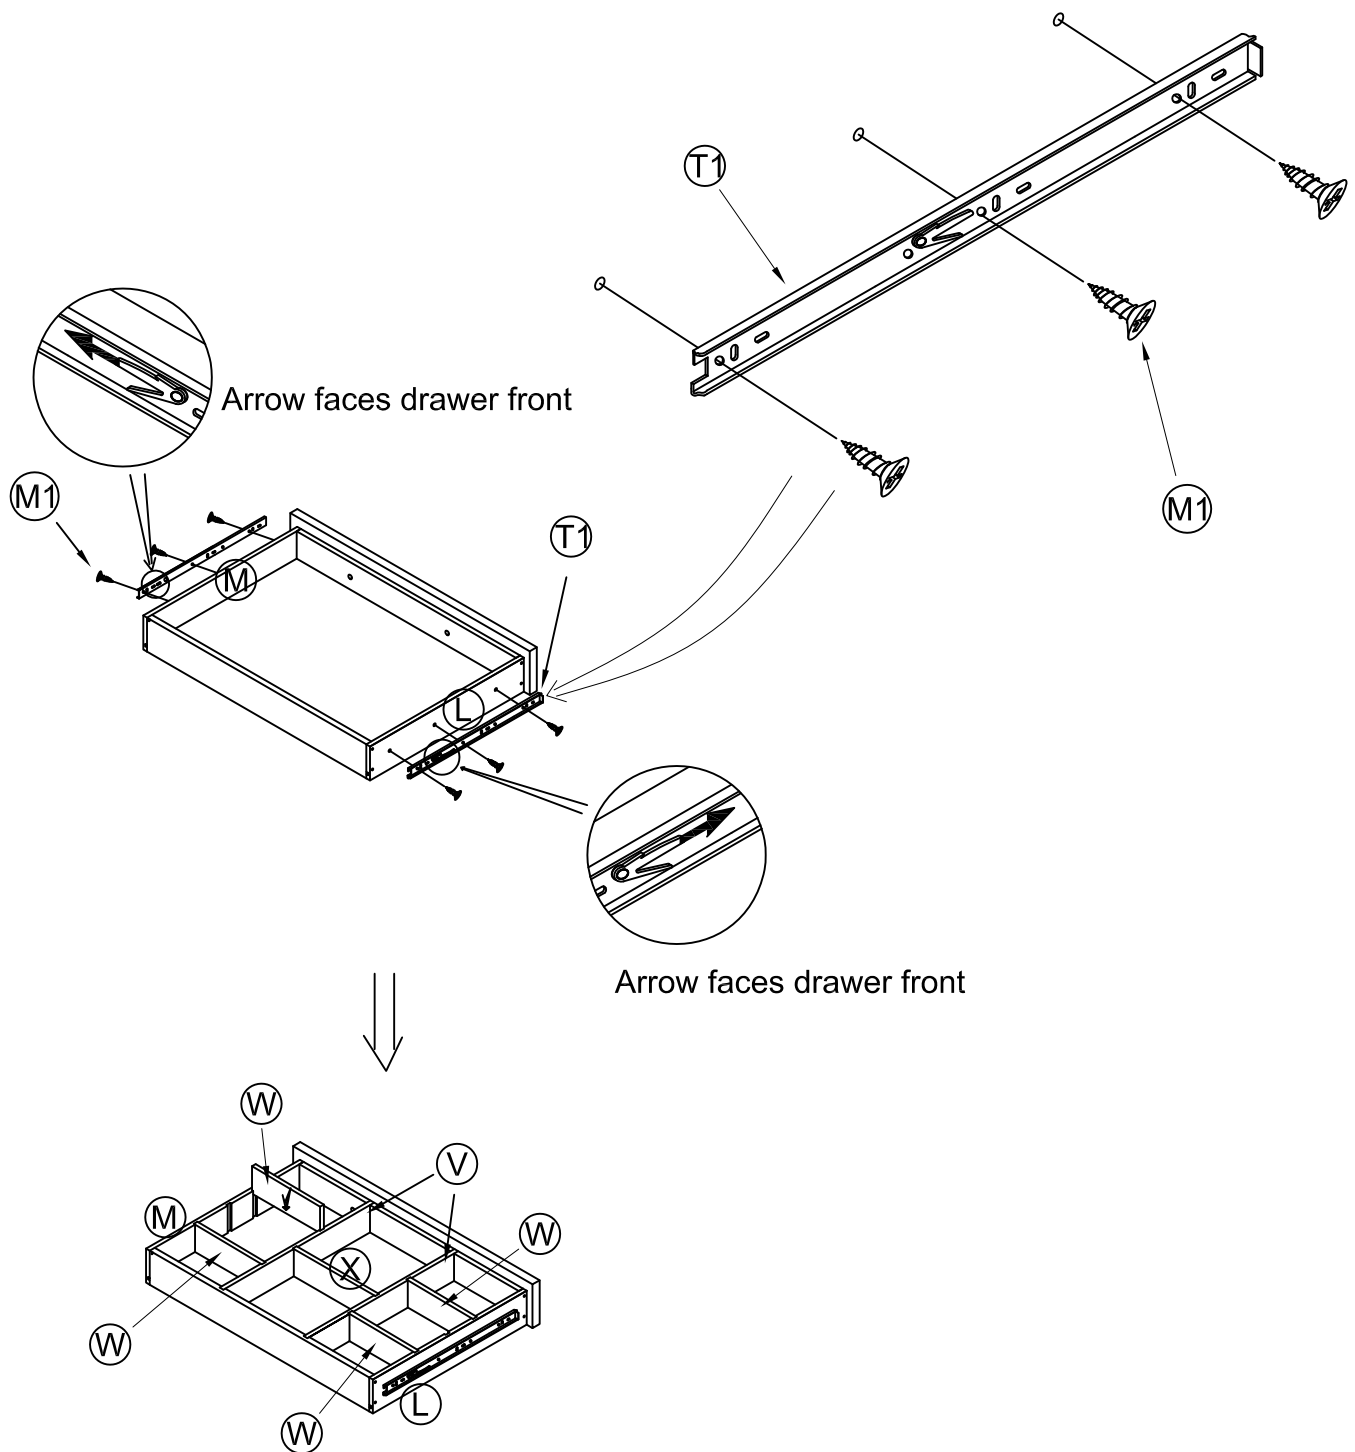


PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE.



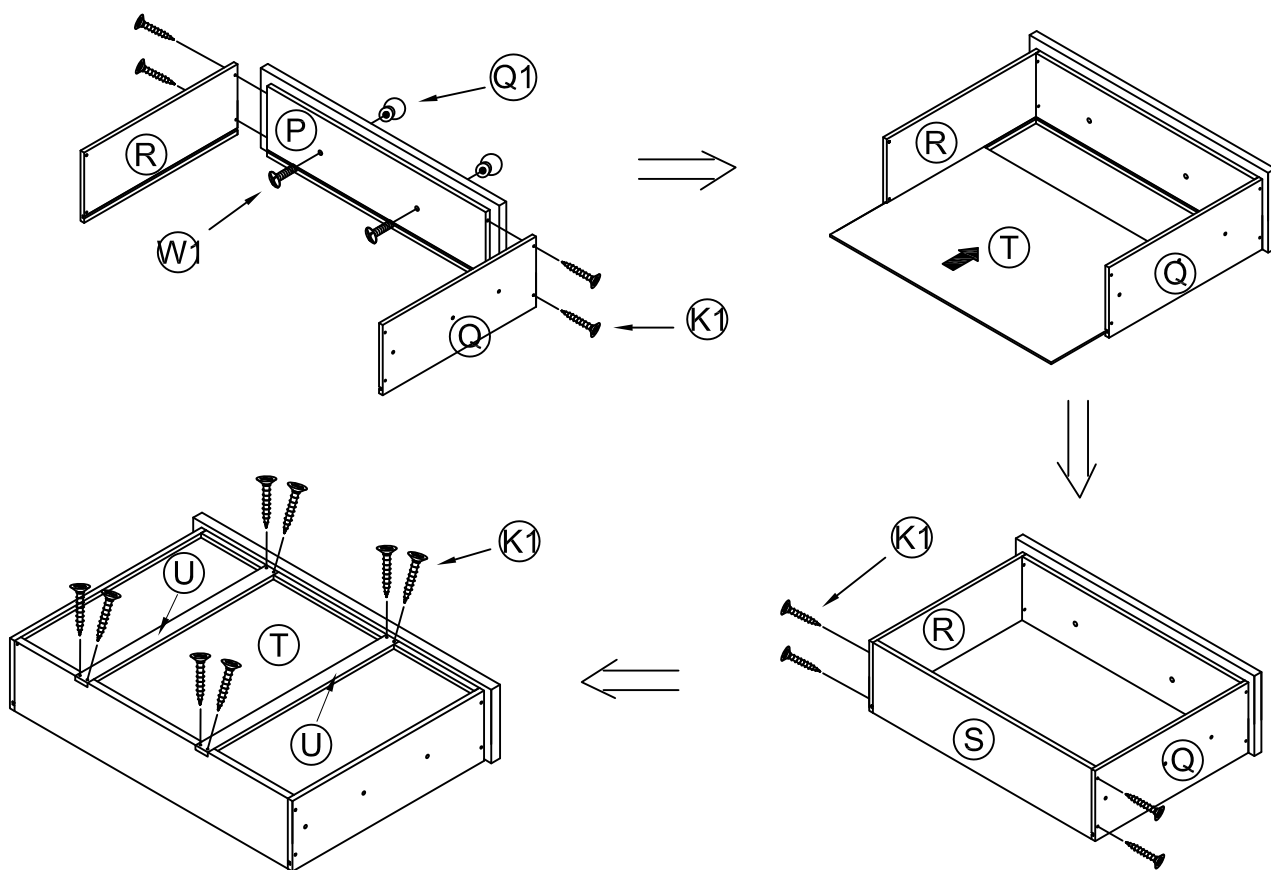
1). ASSEMBLE THE SMALL DRAWER.

- ATTACH SMALL DRAWER PANEL SIDE(L/M) USING 4 SCREWS(K1).
- ATTACH 2 KNOBS(Q1) TO SMALL DRAWER PANEL FRONT(K) USING 2 SCREWS(W1).
- INSERT THE SMALL DRAWER BOTTOM PANEL(N) INTO THE SLOTS IN THE SMALL DRAWER PANEL SIDE(L/M).
- ATTACH SMALL DRAWER PANEL BACK(O) BETWEEN LEFT SMALL DRAWER PANEL SIDE(L) AND RIGHT SMALL DRAWER PANEL SIDE(M) USING 4 SCREWS(K1).
- ATTACH 2 DRAWER SUPPORT PANELS(U) TO DRAWER BOTTOM USING 8 SCREWS(K1).



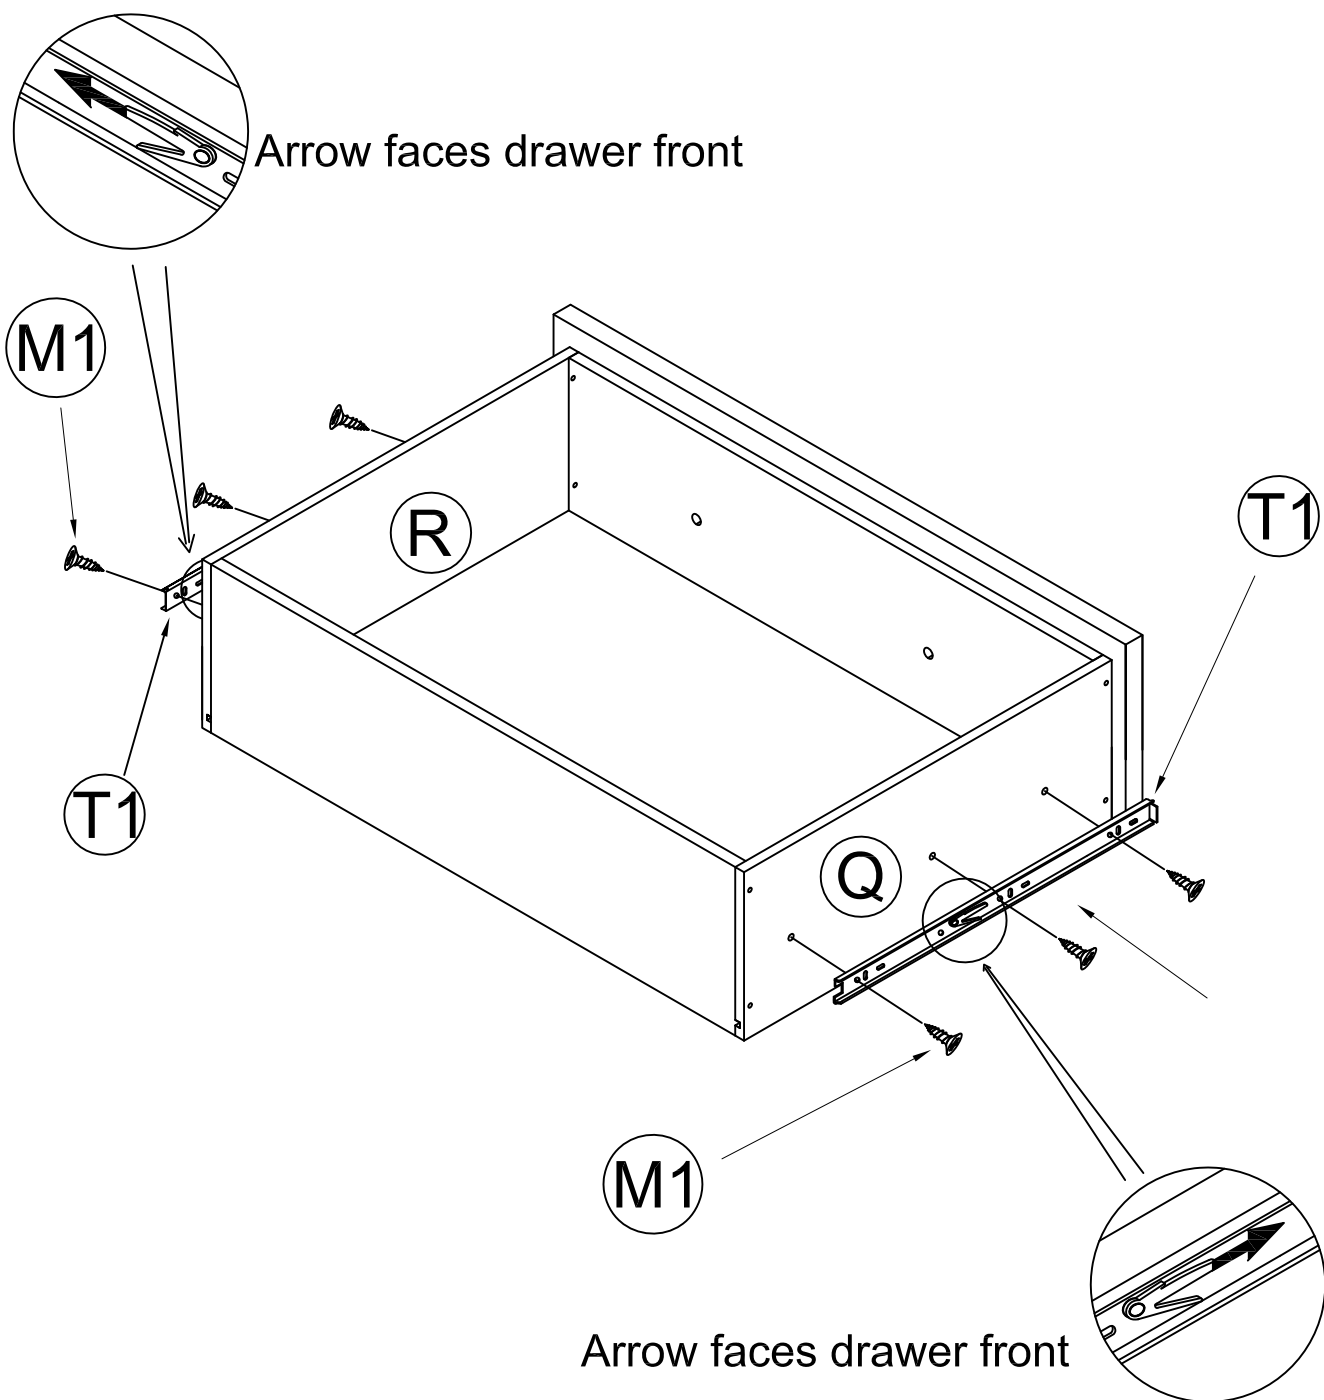
2). ASSEMBLE THE INNER SLIDES(T1) AND PANELS(V/W/X).

- ATTACH THE 2 INNER SLIDES(T1) TO SMALL DRAWER PANEL SIDE(L/M) USING 6 SCREWS(M1).
- INSERT THE PANELS(V/W/X) IN THE SMALL DRAWER.



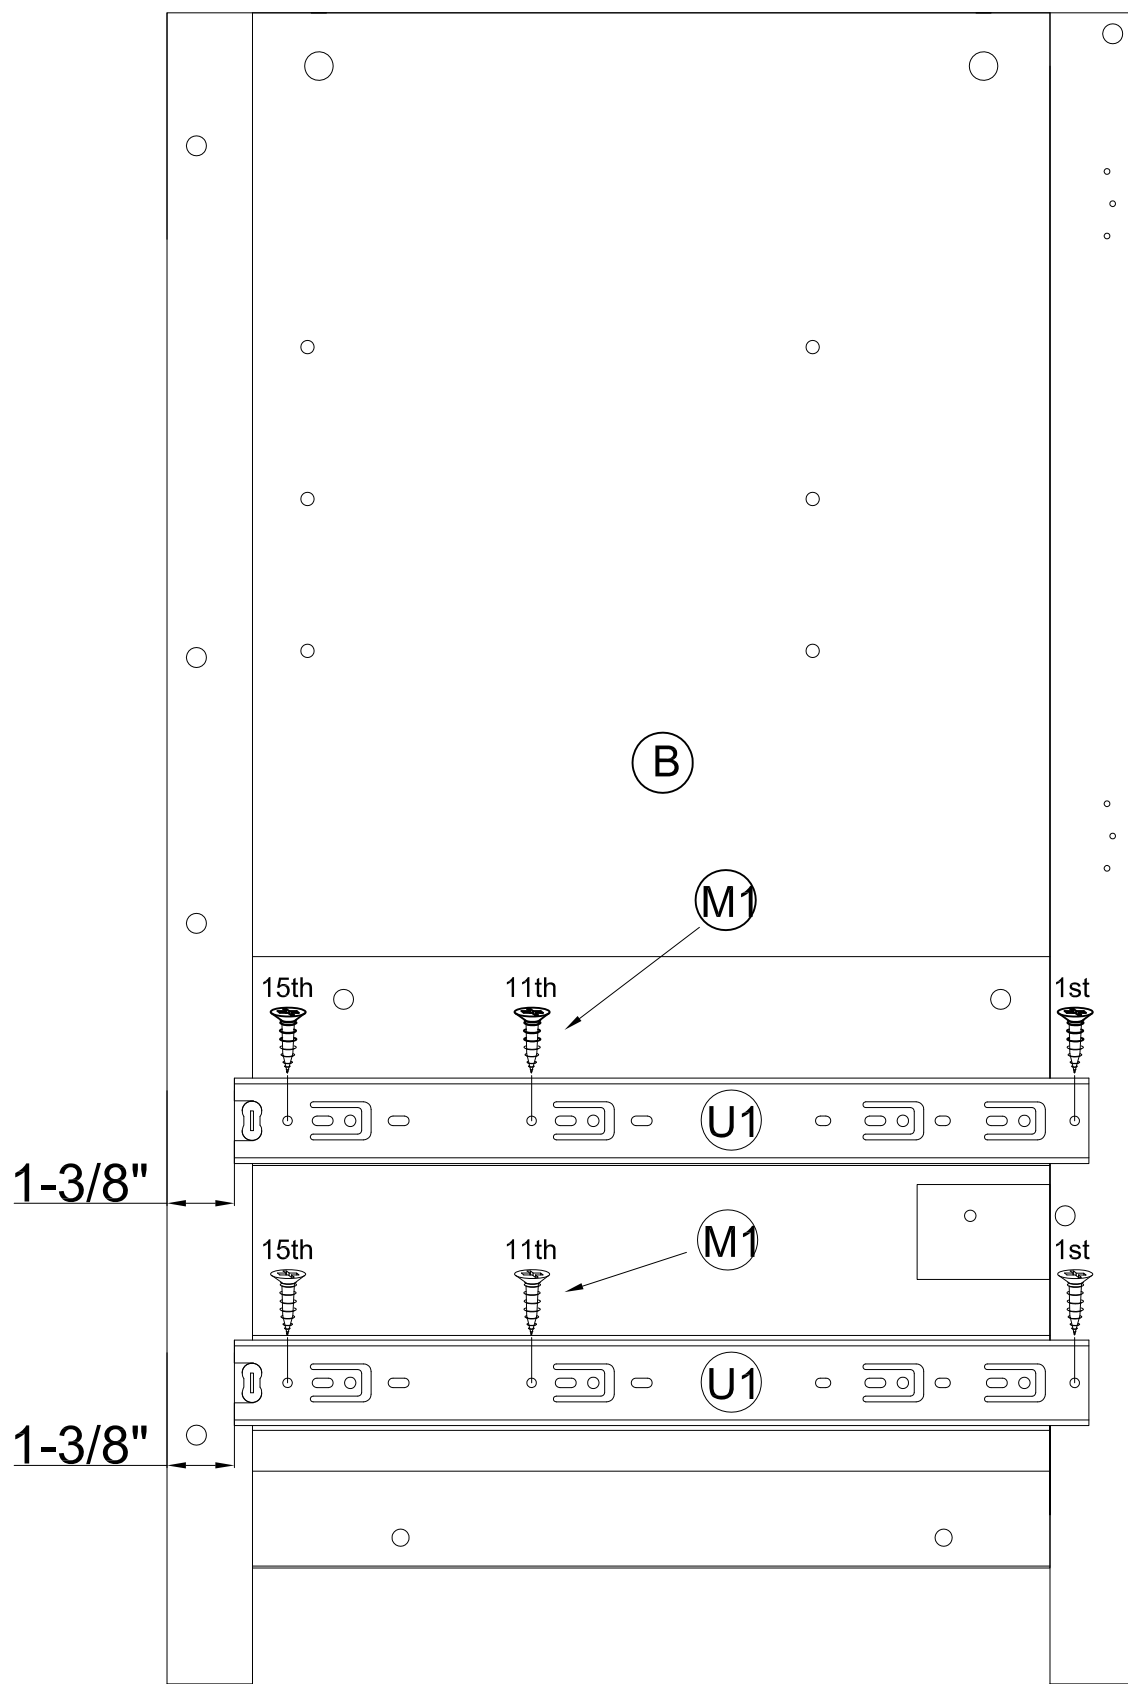
3). ASSEMBLE THE LARGE DRAWER.

- ATTACH LARGE DRAWER PANEL SIDE(Q/R) USING 4 SCREWS(K1).
- ATTACH 2 KNOBS(Q1) TO LARGE DRAWER PANEL FRONT(P) USING 2 SCREWS(W1).
- INSERT THE DRAWER LARGE BOTTOM PANEL(T) INTO THE SLOTS IN THE LARGE SIDE DRAWER PANELS(Q/R).
- ATTACH LARGE DRAWER PANEL BACK(S) BETWEEN LARGE LEFT SIDE DRAWER PANEL(Q) AND LARGE RIGHT DRAWER PANEL SIDE(R) USING 4 SCREWS(K1).
- ATTACH 2 DRAWER SUPPORT PANELS(U) TO DRAWER PANEL BOTTOM(T) USING 8 SCREWS(K1).



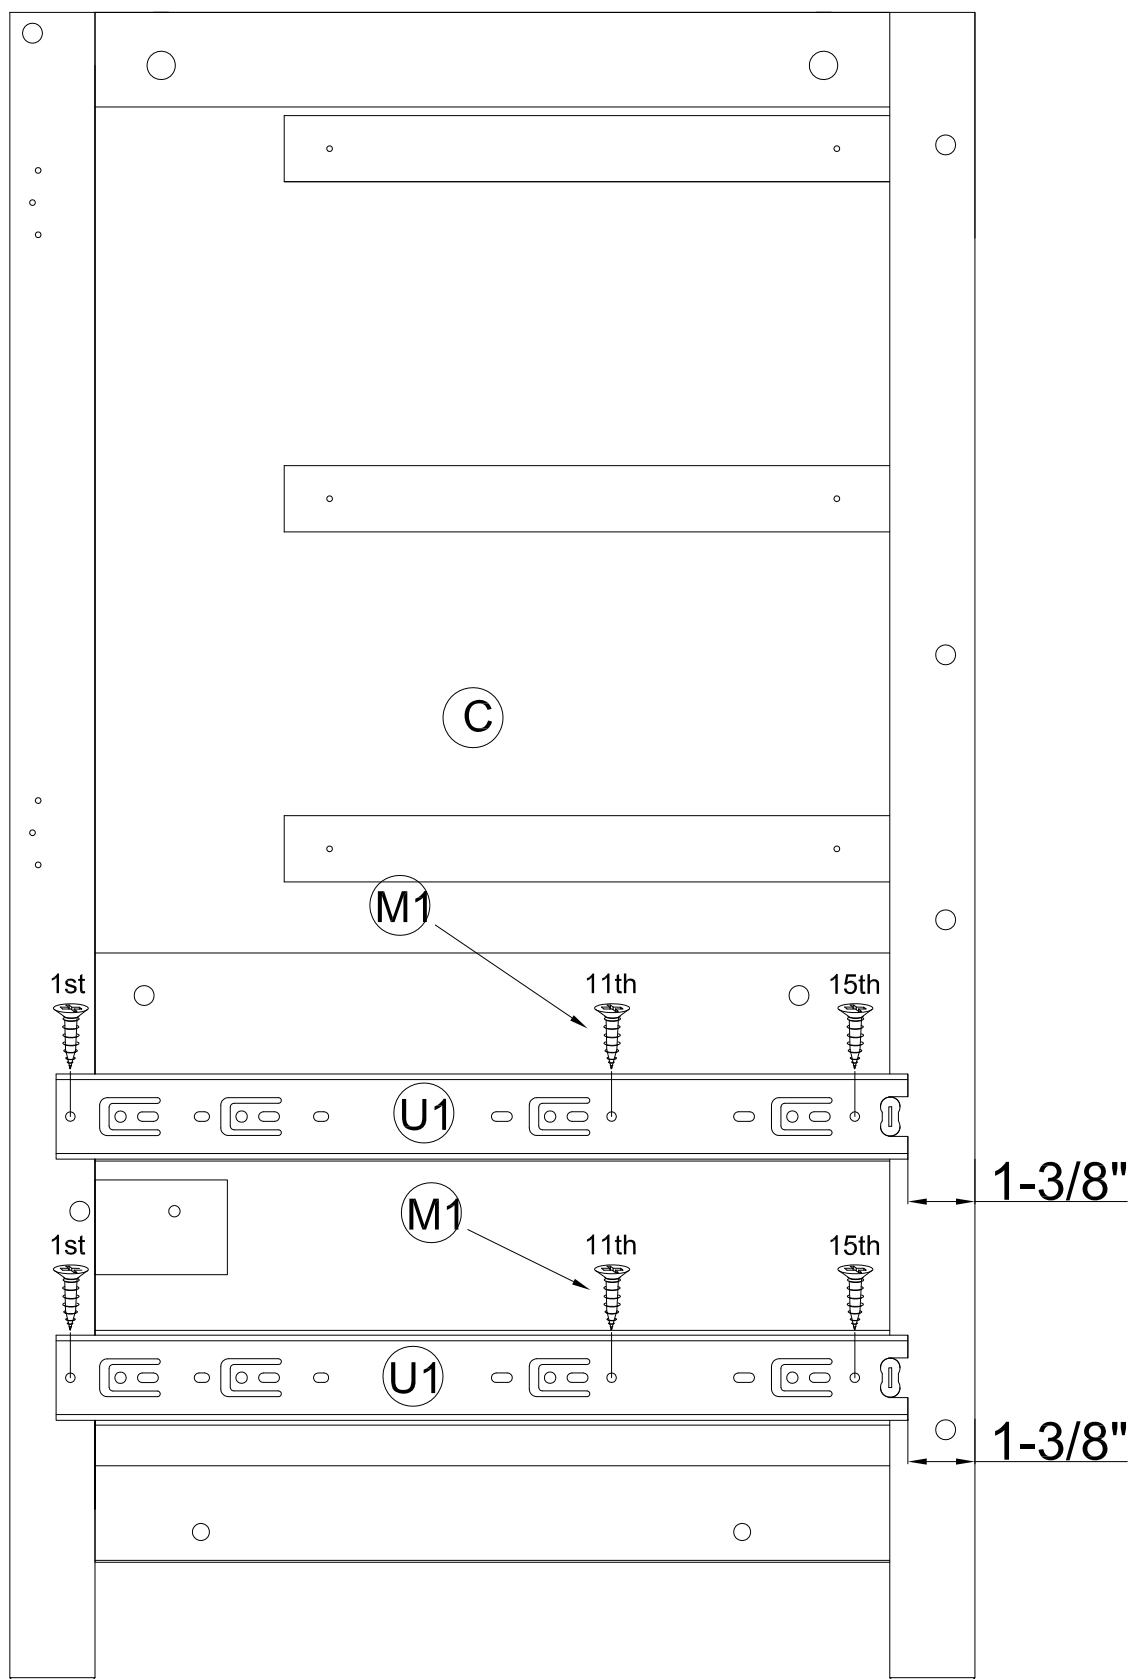
4). ASSEMBLE THE INNER SLIDES(T1).

- ATTACH THE 2 INNER SLIDES(T1) TO LARGE DRAWER PANEL SIDE(Q/R) USING 6 SCREWS(M1).



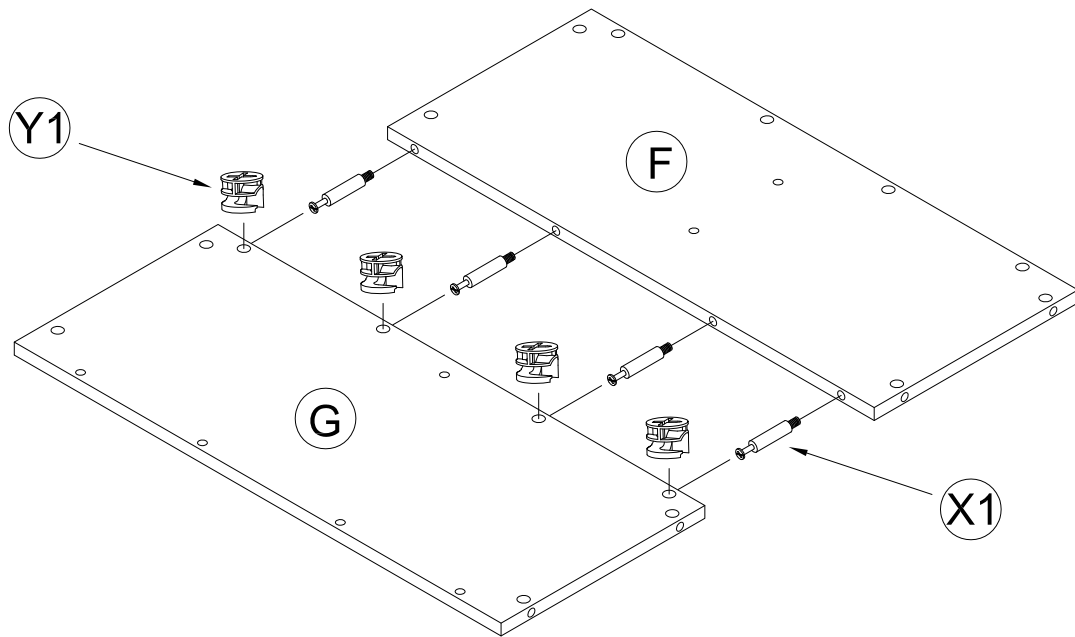
5). ASSEMBLE THE 2 OUTER SLIDES(U1).

- ATTACH 2 OUTER SLIDES(U1) TO RIGHT SIDE PANEL(B) USING 6 SCREWS(M1).



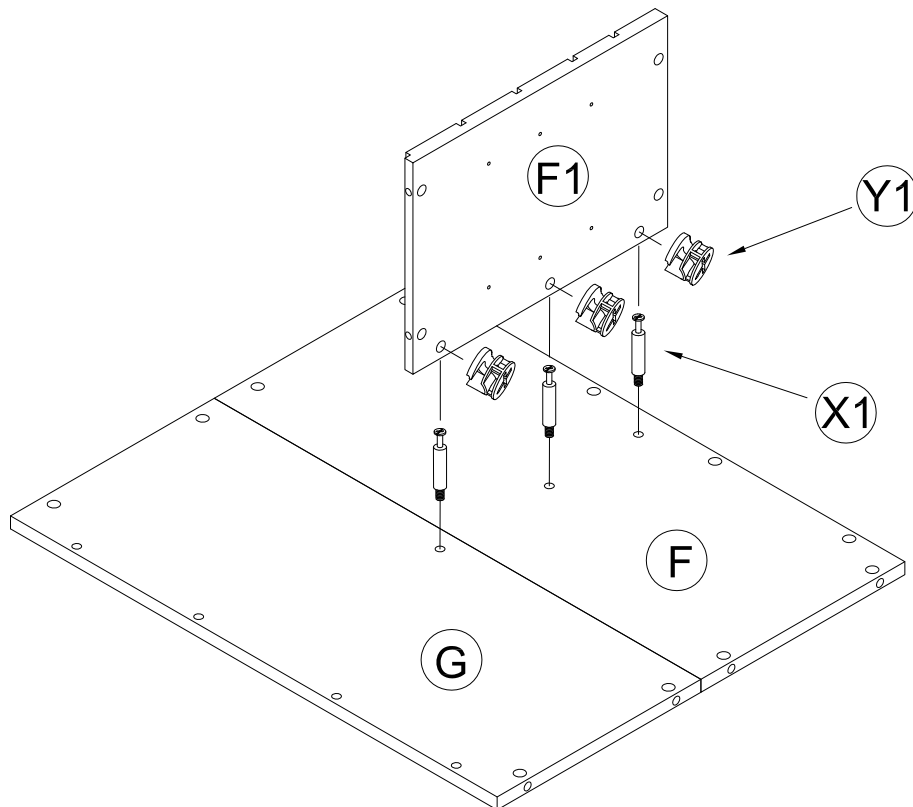
6). ASSEMBLE THE 2 OUTER SLIDES(U1).

- ATTACH 2 OUTER SLIDES(U1) TO LEFT SIDE PANEL(C) USING 6 SCREWS(M1).



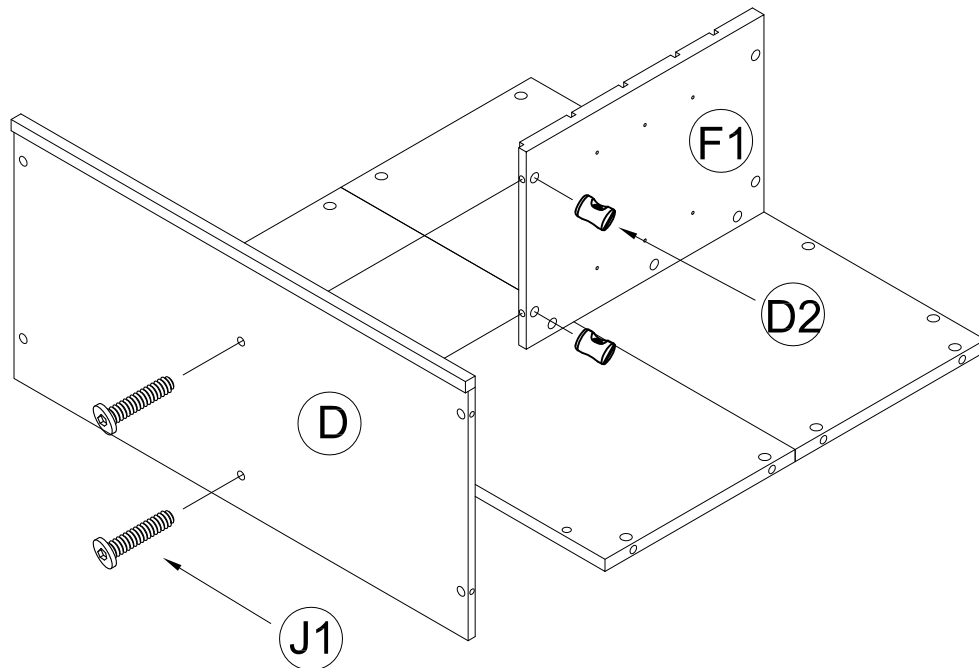
7). ASSEMBLE THE BACK PANEL(F/G).

- ROTATE 4 CAM-BOLTS(X1) INTO THE HOLES IN THE UP BACK PANEL(F).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE DOWN BACK PANEL(G) AND ATTACH USING 4 CAM-LOCKS(Y1).



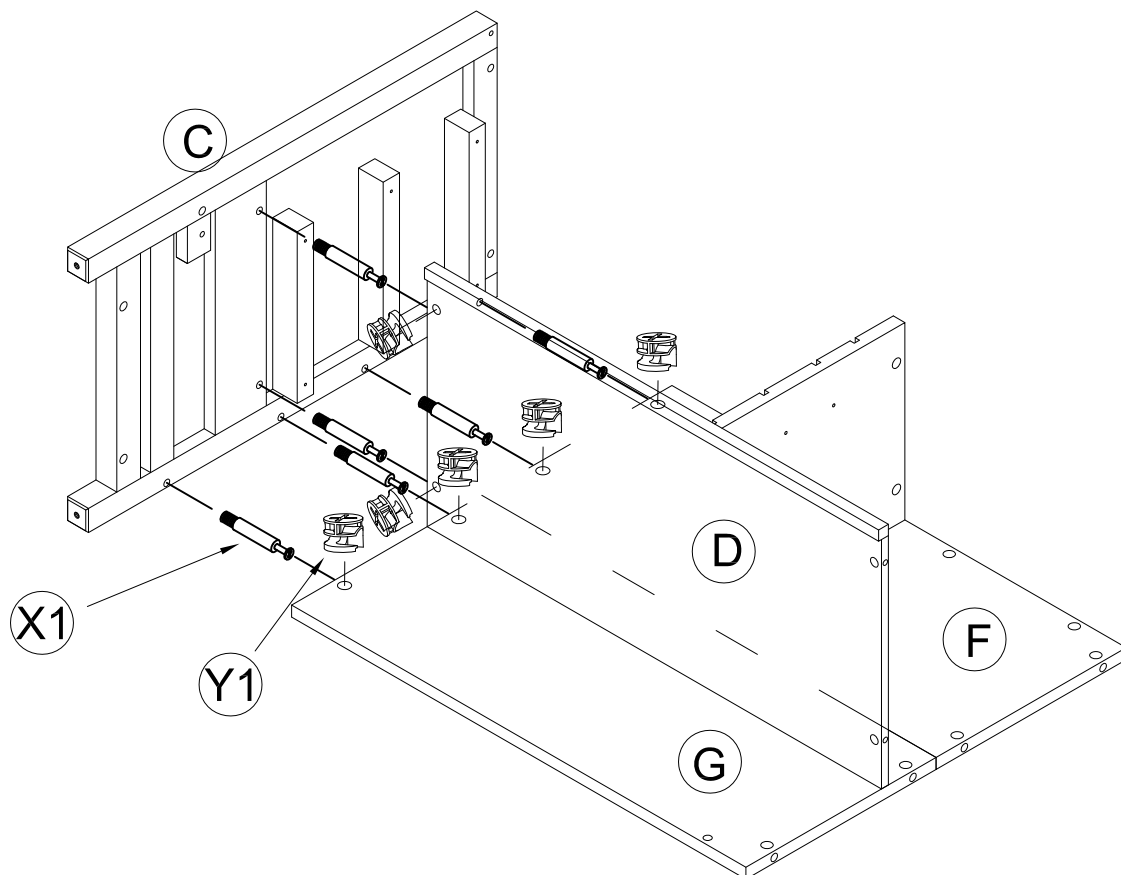
8). ASSEMBLE THE STAND PANEL(F1).

- ROTATE 3 CAM-BOLTS(X1) INTO THE HOLES IN THE UP BACK PANEL(G/F).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE STAND PANEL(F1) AND ATTACH USING 3 CAM-LOCKS(Y1).



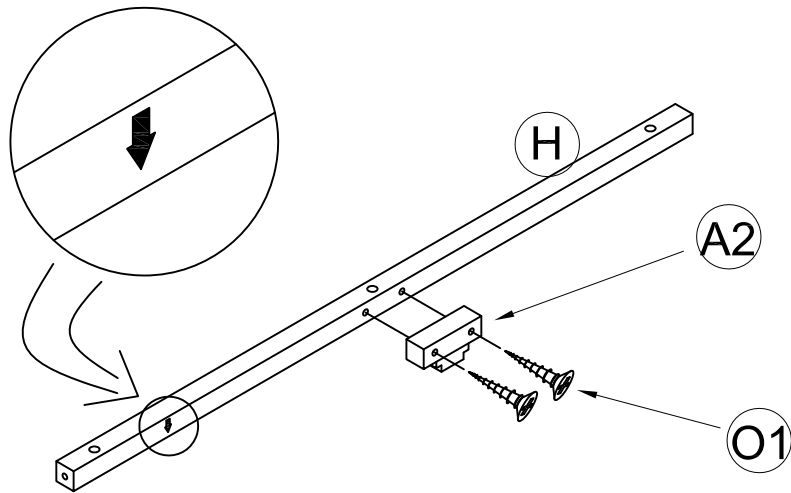
9). ASSEMBLE THE LARGE ACROSS PANEL(D).

- INSERT NUTS(D2) INTO THE HOLES IN THE STAND PANEL(F1).
- ATTACH THE LARGE ACROSS PANEL(D) TO STAND PANEL(F1) USING 2 BOLTS(J1).



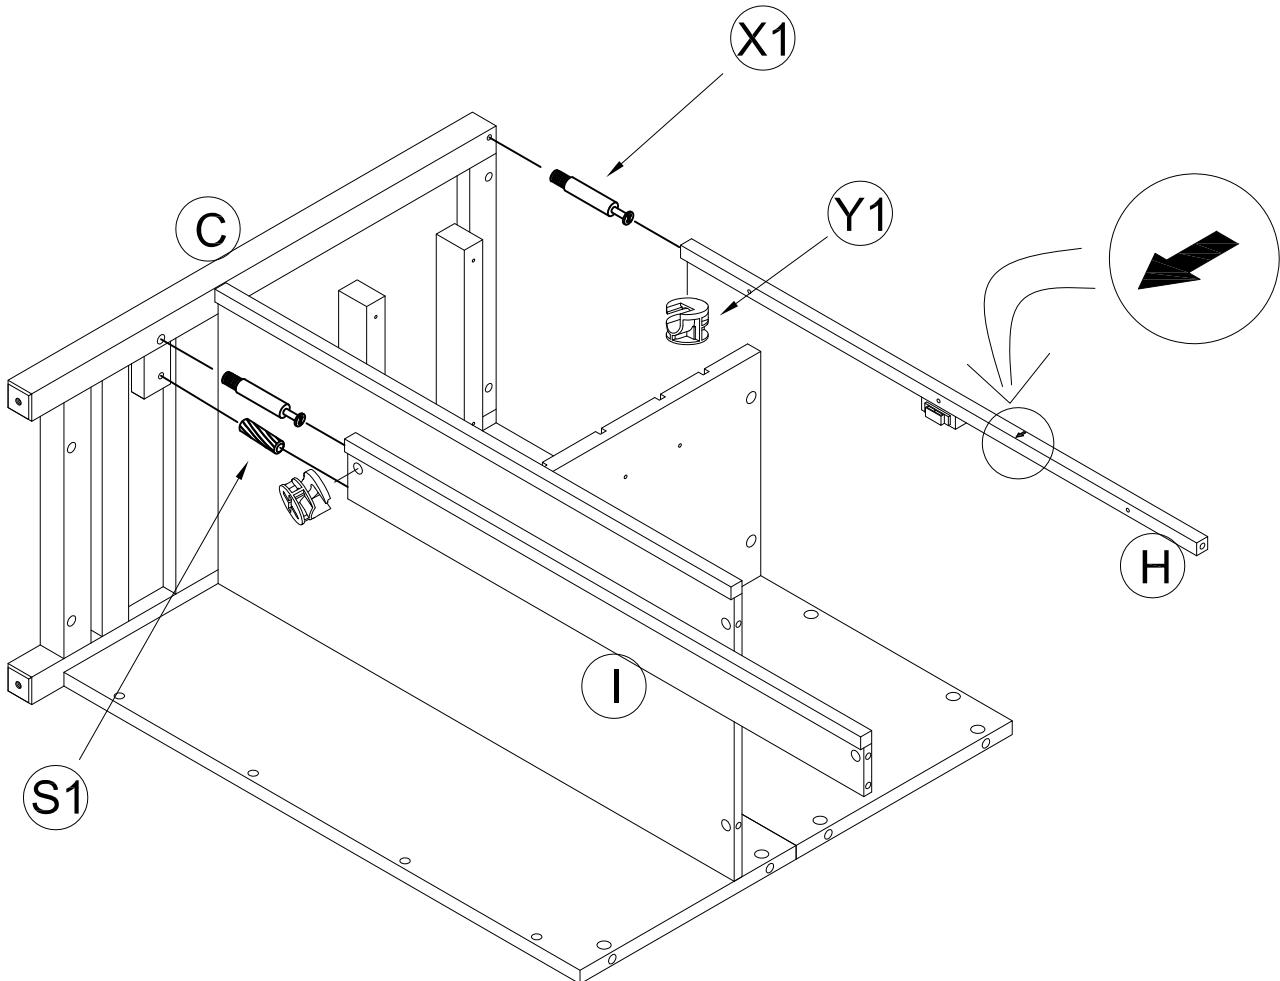
10). ASSEMBLE THE LEFT SIDE PANEL(C).

- ROTATE 6 CAM-BOLTS(X1) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(D/F/G) AND ATTACH USING 6 CAM-LOCKS(Y1)



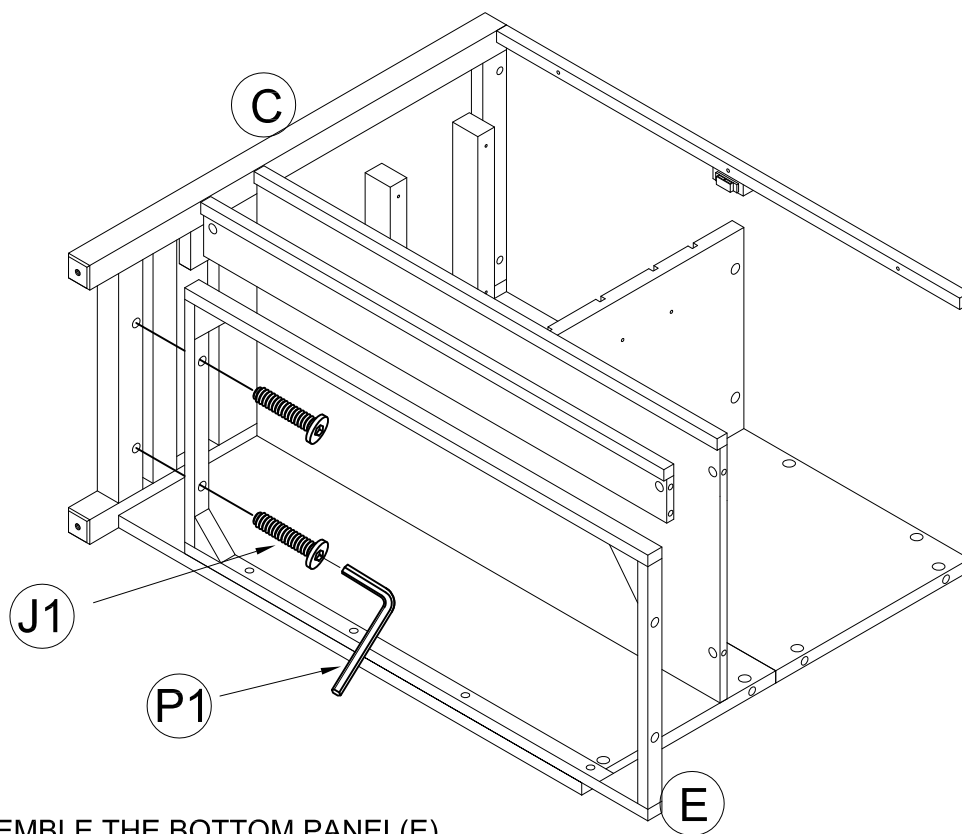
11). ASSEMBLE THE LARGE MAGNETS(A2).

- ATTACH THE LARGE MAGNET(A2) TO ADORNING PANEL(H) USING 2 SCREWS(O1).



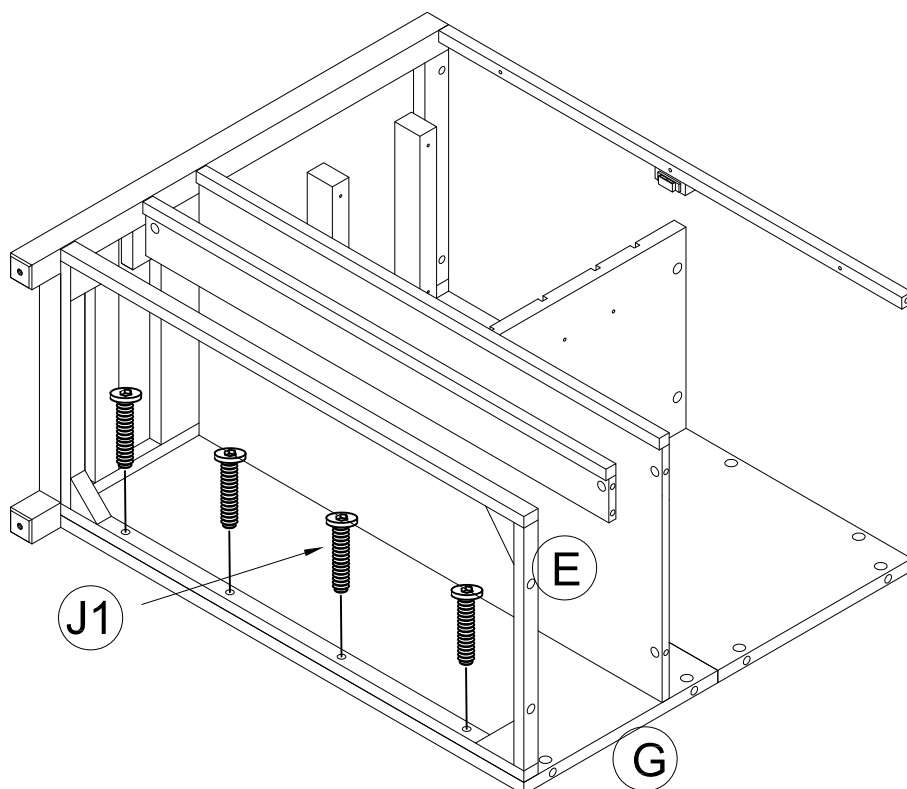
12). ASSEMBLE THE PANEL(H/ I).

- ROTATE 2 CAM-BOLTS(X1) AND INSERT 1 DOWEL(S1) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(H/ I) AND ATTACH USING 2 CAM-LOCKS(Y1)



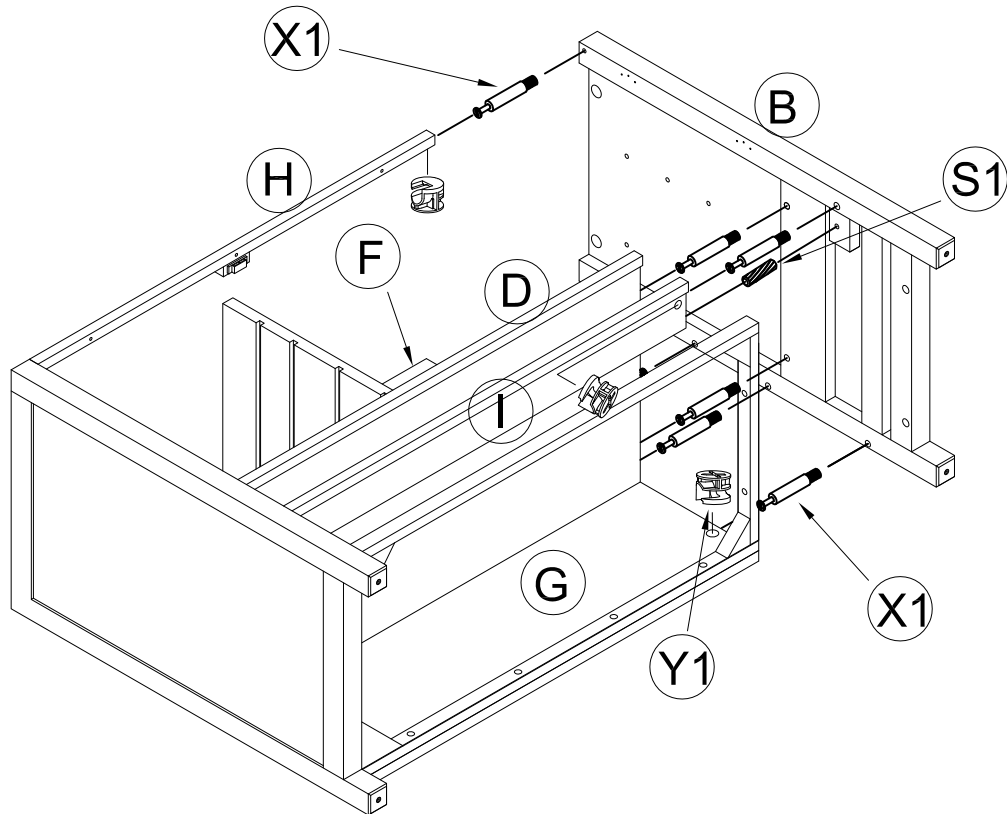
13). ASSEMBLE THE BOTTOM PANEL(E).

- ATTACH THE BOTTOM PANEL(E) TO LEFT SIDE PANEL(E) USING 2 BOLTS(J1).



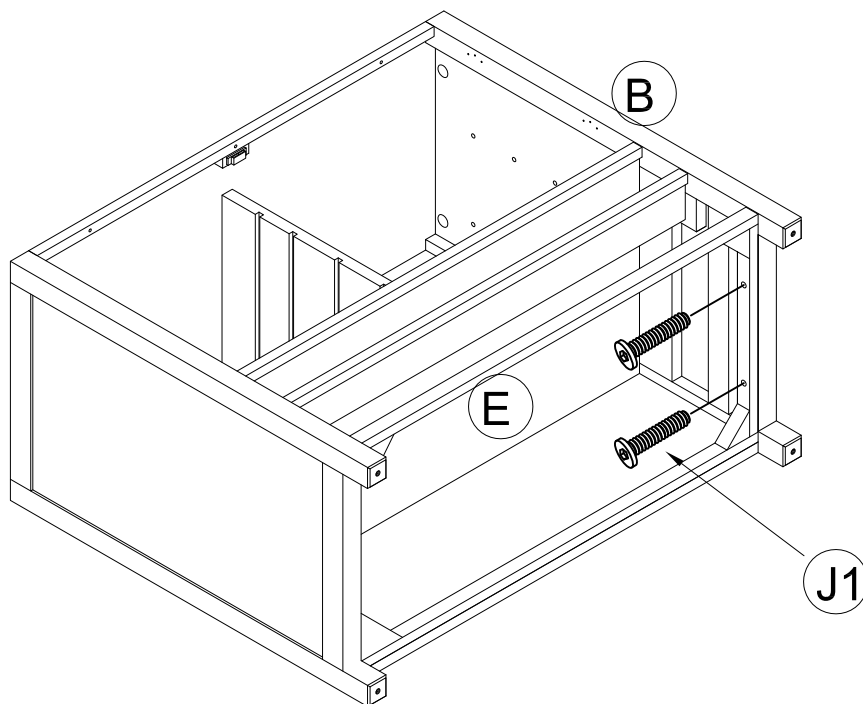
14). ASSEMBLE THE BOTTOM PANEL(E).

- ATTACH THE BOTTOM PANEL(E) TO DOWN BACK PANEL(G) USING 4 BOLTS(J1).



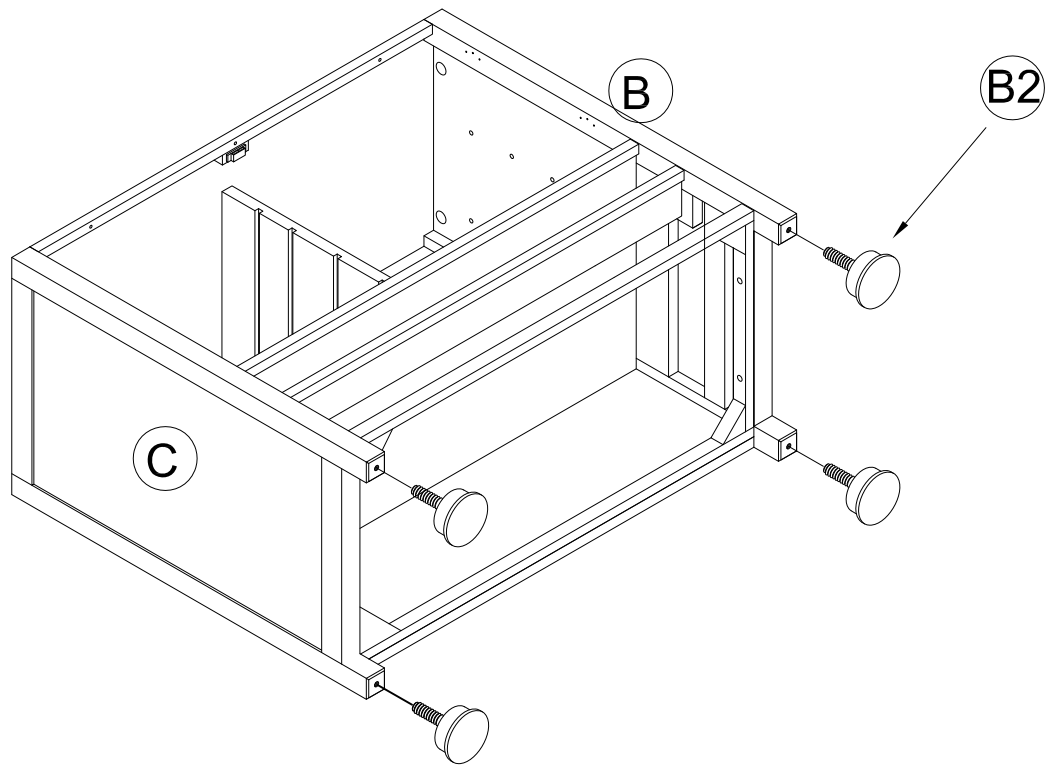
15). ASSEMBLE THE RIGHT SIDE PANEL(B).

- ROTATE 8 CAM-BOLTS(X1) AND INSERT 1 DOWEL(S1) INTO THE HOLES IN THE RIGHT SIDE PANEL(B).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(D/F/G/H/ I) AND ATTACH USING 8 CAM-LOCKS(Y1).



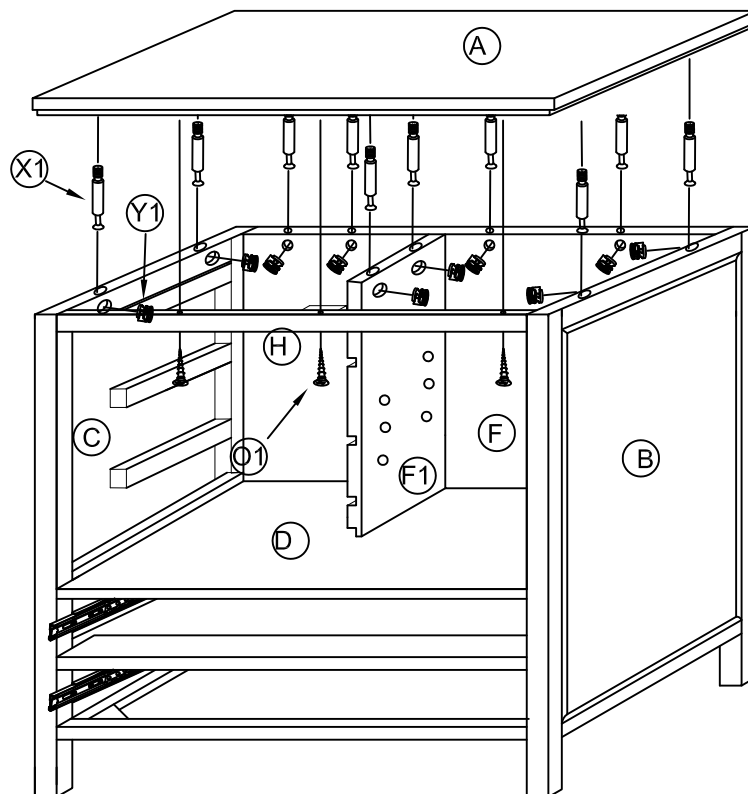
16). ASSEMBLE THE BOTTOM PANEL(E).

- ROTATE 2 BOLTS(J1) INTO THE HOLES IN THE BOTTOM PANEL(E).



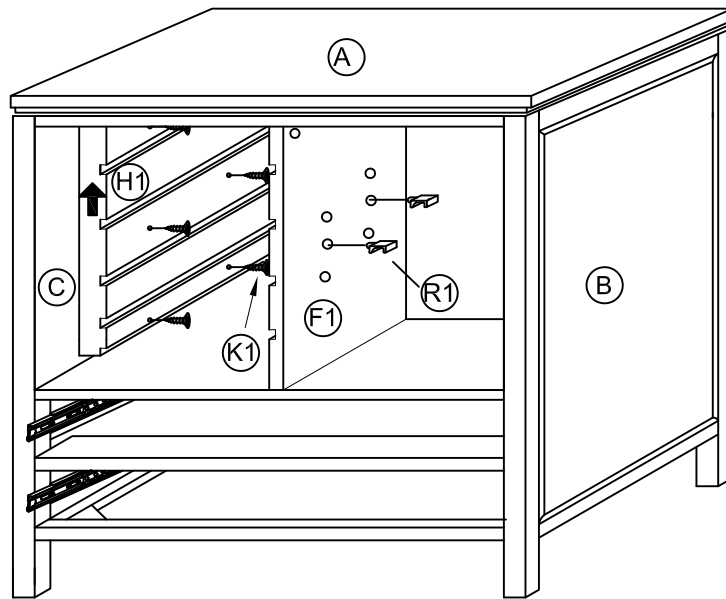
17). ASSEMBLE THE FEET(B2).

- ROTATE 4 FEET(B2) INTO THE HOLES IN THE SIDE PANEL(B/C).



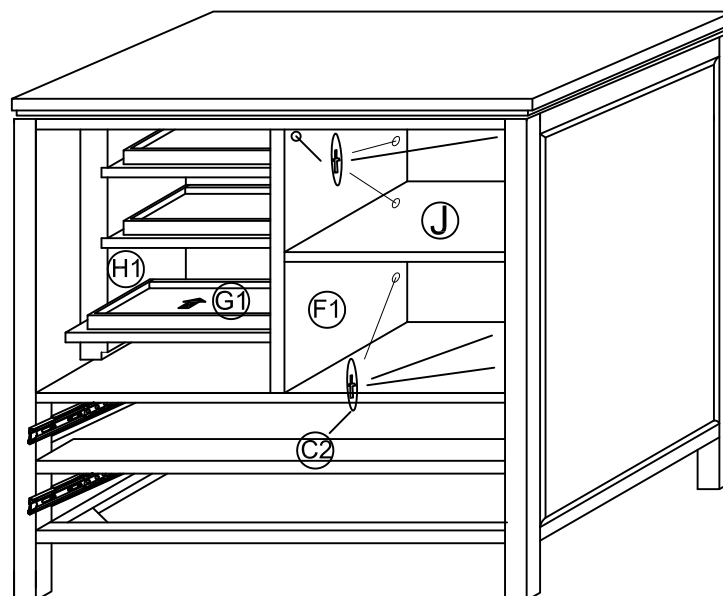
18). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 10 CAM-BOLTS(X1) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN PANEL(B/C/F/F1) AND ATTACH USING 10 CAM-LOCKS(Y1).
- FINALLY, ROTATE THE 3 SCREWS(O1) INTO THE HOLES IN THE ADORNING PANEL(H).



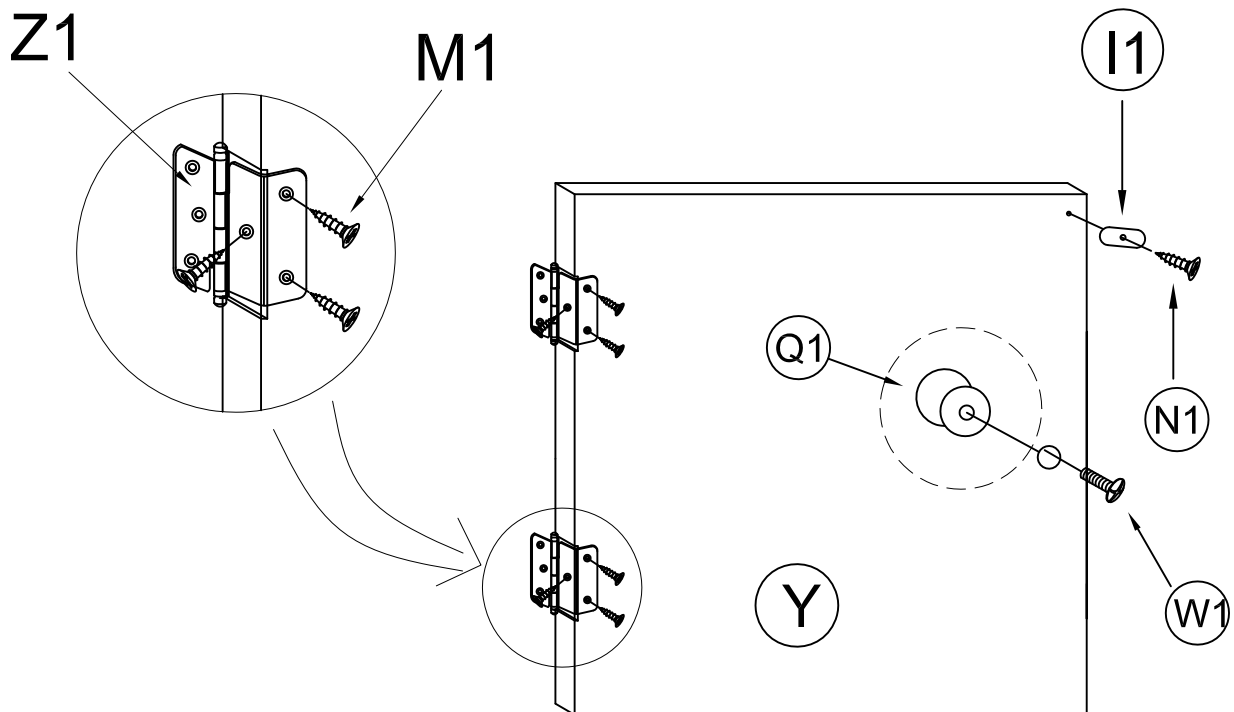
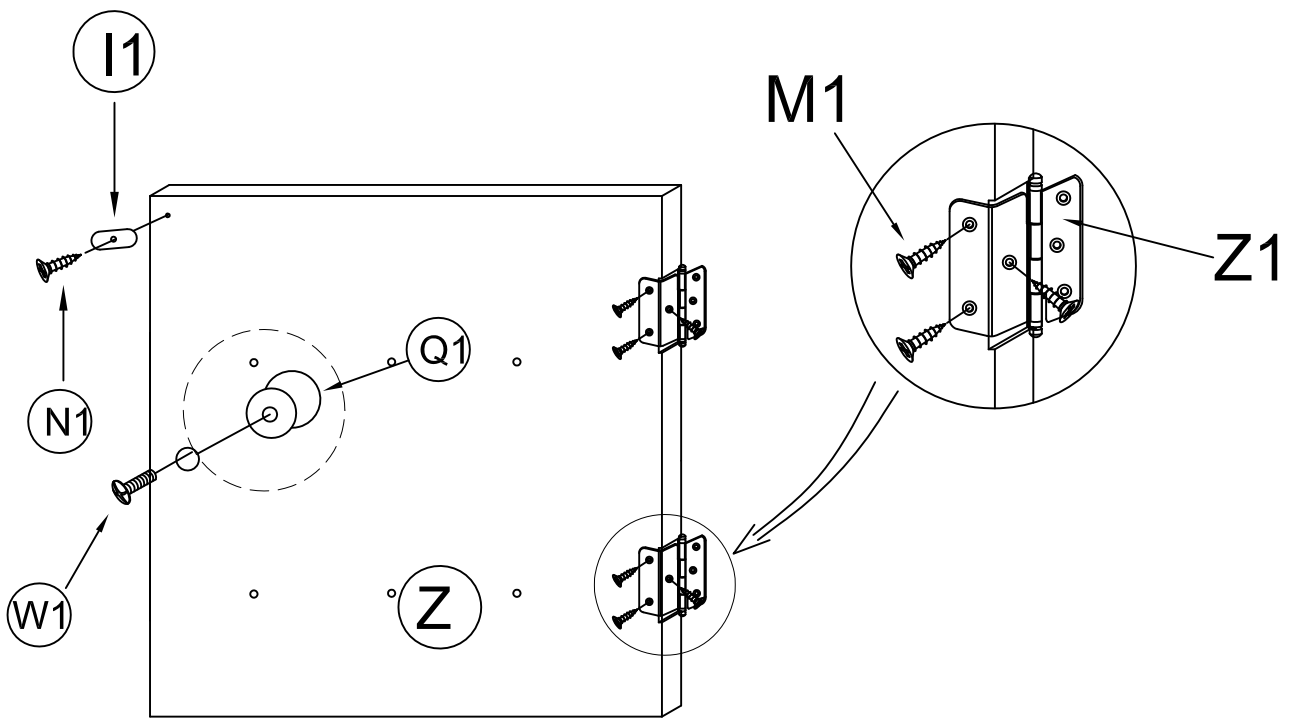
19). ASSEMBLE THE LEFT STAND PANEL(H1).

- LIFT THE LEFT STAND PANEL(H1) CLOSED TO TOP PANEL(A) AND LEFT SIDE PANEL(C) USING 6 SCREWS(K1).
- INSERT THE 4 SHELF SUPPORTS(R1) INTO THE HOLES IN THE STAND/RIGHT SIDE PANEL(F1/B).



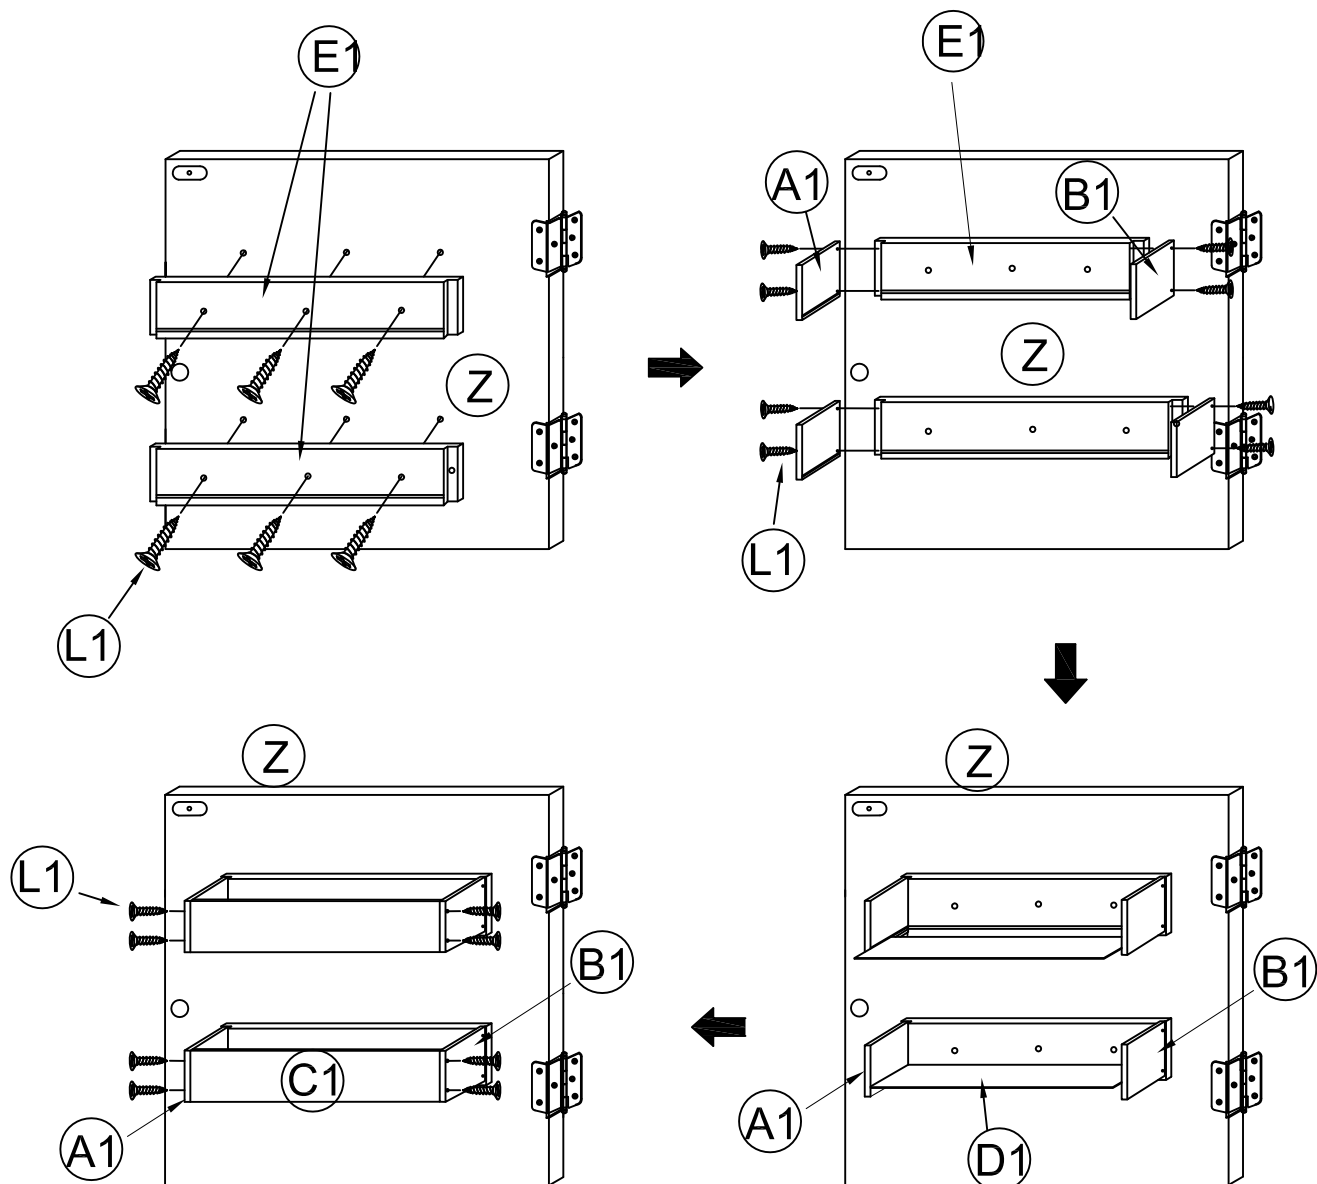
20). ASSEMBLE THE SHELF(J) AND SALVER PANEL(G1).

- PUT THE SHELF(J) ONTO THE SHELF SUPPORT(R1) AND INSERT SALVER PANELS(G1) INTO GROOVES IN PANELS (H1/F1) .
- ATTACH THE 17 CAM-LOCKS(Y1) USING 17 CAM-LOCK CAPS(C2).



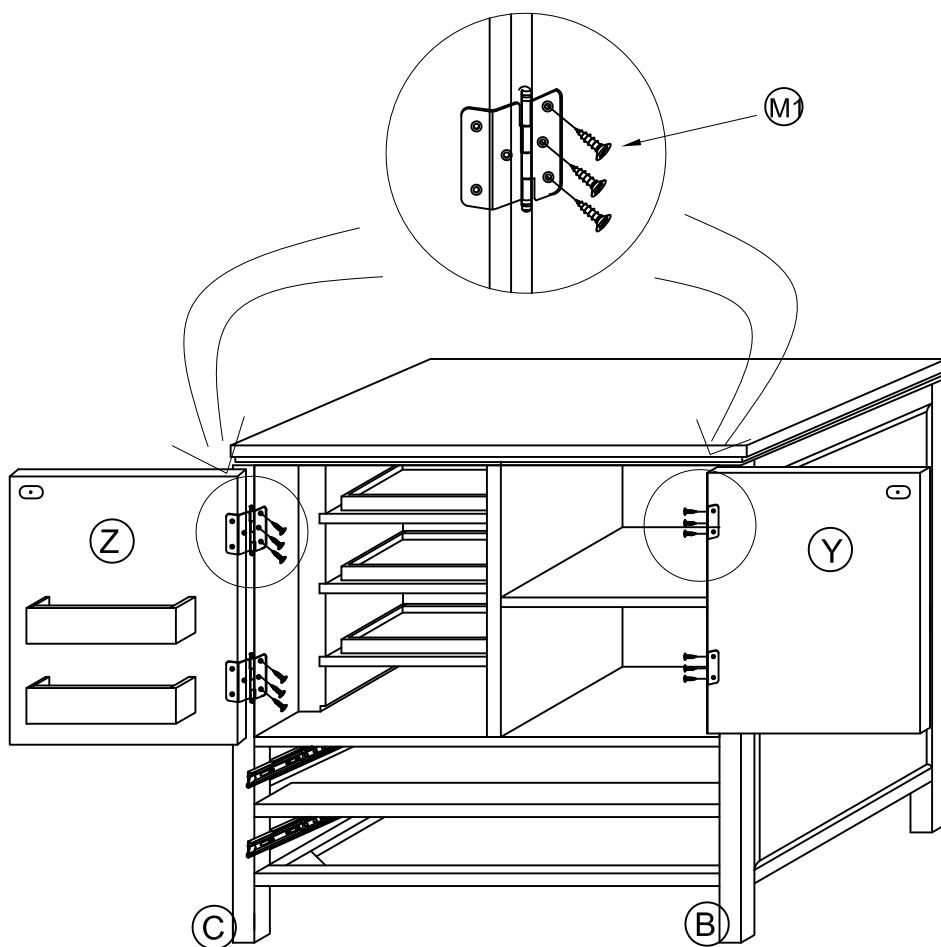
21). ASSEMBLE THE DOORS(Y/Z).

- ATTACH 2 KNOBS(Q1) TO DOORS(Y/Z) USING 2 SCREWS(W1).
- ATTACH THE 2 FEMALE MAGNETS(I1) TO DOORS(Y/Z) USING 2 SCREWS(N1).
- ATTACH THE 4 HINGES(Z1) TO DOORS(Y/Z) USING 12 SCREWS(M1).



22). ASSEMBLE THE LEFT DOOR(Z).

- ATTACH 2 DRAWER PANEL FRONTS(E1) TO DOOR(Z) USING 6 SCREWS(L1).
- ATTACH 2 DRAWER PANEL SIDES(A1/B1) USING 8 SCREWS(L1).
- INSERT 2 DRAWER PANEL BOTTOMS(D1) INTO THE SLOTS IN THE SIDE DRAWER PANELS(A1/B1).
- ATTACH 2 DRAWER PANEL BACKS(C1) BETWEEN DRAWER SIDE PANELS(A1/B1) USING 8 SCREWS(L1).



23). ASSEMBLE THE DOORS(Y/Z).

- ATTACH THE DOORS(Y/Z) TO SIDE PANELS(B/C) USING 12 SCREWS(M1).



24). ASSEMBLE THE DRAWER.

- INSERT ALL DRAWER INNER SLIDES(T1) INTO THE OUTER SLIDES(U1).